


INFINITY FINE | BOLD

Installation instructions



INSTALLATION WITH SCREW-ON CLIPS AND HORIZONTAL FURRING

Included:



Acoustic Panels
Infinity

6 x



Screw-clips


20 x



Screws for screw-clips

20 x

You also need:

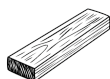

Wooden furring



appropriate screws and
dowels for securing the
wooden furring


je
16 x



Drill


1 Substructure

The Infinity panels are mounted on a horizontal wooden substructure. The bottom wooden slat should rest on the floor. The wooden slats are secured to the wall using appropriate dowels and screws.




2

Place the first acoustic panel at the starting position. Then, for each slat, slide a screw-clip all the way into the side mounting groove behind the panel's ridge.

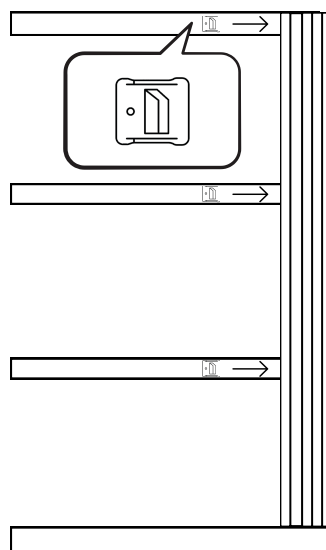


3

Use the included screws to secure the screw-on clips to the wooden slats in the correct position.

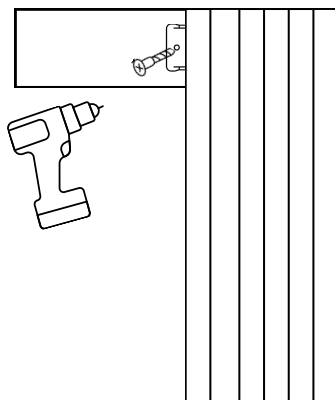

4

Repeat steps 2 and 3 with all remaining panels.

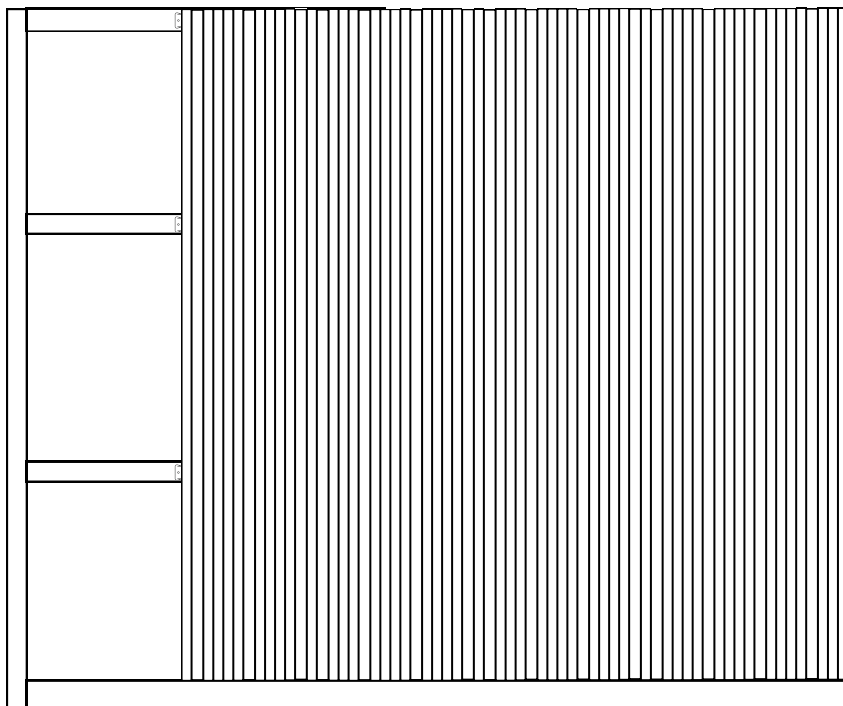



Aesthetics & Acoustics

ORGANOID GmbH

Headquarter:
Nesselgarten 422
6500 Fliess

Sales Office:
Kaiserjägerstraße 4a
6020 Innsbruck

+43 5449 200 01 | info@organoids.com | www.organoids.com