

WALL ABSORBER INFINITY WALL



Installation instruction screw hooks




INSTALLATION WITH *SCREW HOOKS*

Included




Wall absorber Infinity Wall



Screw hooks

You also need:

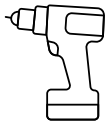

drill




6 x per
panel

appropriate screws and dowels for
mounting the power magnets


1

Using a level,
mark the locations
for 2 drill holes.

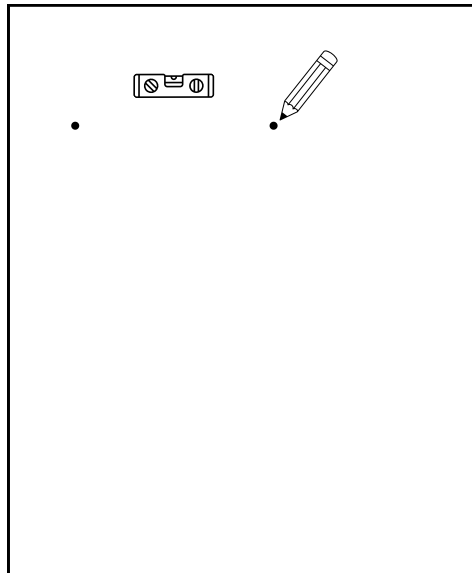


2

Drill holes and
insert dowels.

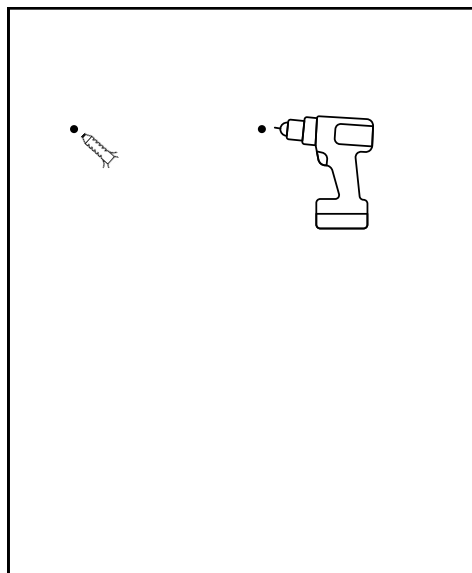

3

Insert the screw
hooks and hang
the Infinity Wall.

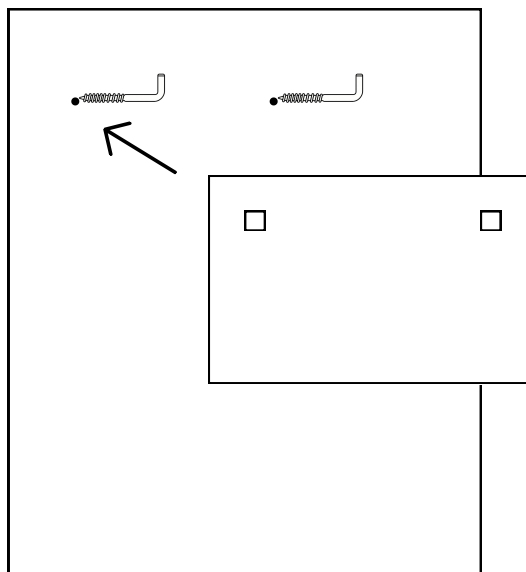



Aesthetics & Acoustics

ORGANOID GmbH

Headquarter:
Nesselgarten 422
6500 Fliess

Sales Office:
Kaiserjägerstraße 4a
6020 Innsbruck

+43 5449 200 01 | info@organoids.com | www.organoids.com